

IMPORTANT: Due to constant improvements in vehicle design and quality, changes to a vehicle configuration may occur, or an error exists which affects the Owner's Manual after the supply for production has already been printed.

The 2021-22 ZFORCE Series Owner's Manual (5BYV-380101-4400-13 US224) on Page 91 inadvertently omitted oil pressure description #12 and listed the EFI fault description twice, which resulted in the description numberings being incorrect on pages 91 and 92:

- **2021-22 ZFORCE 800 Owner's Manual – Page 90 and 91 (corrected)**

CONTROLS AND FEATURES

10 - Tail Light 'ON'. This indicator displays when the main headlight switch is set to this position.

11 - 4WD Indicator. This dashboard section corresponds to the drive method chosen. The front differential gear case contains the synchronizing component that signals the display.

12 - Oil Pressure Indicator. This indicator light displays when engine oil pressure is low. Stop the engine immediately and check the oil level and the engine for leaks to prevent engine damage.

13 - Fuel Gauge. This dashboard section displays the current gas remaining in the tank. 'F' indicates full. 'E' indicates stand-by fuel. When the indicator enters the red area, the fuel remaining is approximately 3.5L (.92 gal). Fuel must be added as soon as possible.

14 - Clock. This dashboard section can be adjusted to the correct time. Long press the 'SEL' button to enter the clock mode and use the right 'ADJ' button to adjust the hours and minutes.

15 - Speedometer. This dashboard section can be toggled to display the vehicle speed in Kilometers per hour (Km/h) or Miles Per Hour (MPH).

16 - Engine Temperature. This dashboard section displays the current coolant temperature, 'C' is low temperature, 'H' is high temperature. Both over-low and over-high are abnormal. Idle the vehicle to warm the engine when it is too cold, and park the vehicle when it is too hot to prevent the coolant from boiling. Keep the coolant temperature in a normal range.

91

CONTROLS AND FEATURES

17 - Seatbelt Reminder(For 3-point seat belts only). This indicator displays when the seat belt is not fastened.

18 - Rider Information Center. This dashboard section can be toggled using the left 'SEL' button to display: 'ODO' -The accumulated vehicle distance traveled in miles/kilometers, 'TRIP' - The trip distance traveled, 'RPM' - The engine speed in Revolutions Per Minute (RPM), 'H' - The accumulated engine run time, 'V' - Battery voltage, 'Brightness' - Set the dashboard display brightness using the 'ADJ' button.

19 - EPS Fault. This indicator light flashes when a fault occurs in the Electronic Power Steering system.

*Select countries (markets) are equipped with turn signals and indicators as standard equipment.

92

An updated version of this Owner's Manual can be found on the CFMOTO Dealer Portal or the consumer website at www.cfmotousa.com. Please store this addendum with your owner's manual.

CFMOTO regrets the error, and assures consumers of our 100% commitment to the production of high-quality vehicles for powersports enthusiasts to enjoy.