

**IMPORTANT:** Due to constant improvements in vehicle design and quality, changes may occur that affect owner's manual information after the supply for production has been printed.

An error was discovered in the following 2023 CFMOTO motorcycle owner's manuals:

**300NK – Page 112**

**300SS – Page 113**

**450SS – Page 109**

**650NK – Page 112**

**650 ADventura – Page 112**

**700CL-X and 700CL-X Sport – Page 105**

**Ibex 800 S and Ibex 800 T – Page 128**

To correctly check the coolant level, CFMOTO motorcycles must be held upright (vertically) on level ground. Do not determine the coolant level when the motorcycle is parked on its side stand.

The image below has the correct coolant level inspection instructions, but the appearance and location of the coolant reservoir vary by model. Please reference these instructions and disregard the inaccurate instructions in the owner's manual. Store this addendum with your vehicle's paperwork.

CFMOTO apologizes for the error.

## 2023 Motorcycle Owner's Manuals Revised Coolant Level Inspection Instructions

MAINTENANCE

**Coolant Level Inspection**


Support the vehicle upright (vertically) on level ground.

Inspect the coolant level in the reservoir.

If the level is within area 'B,' the coolant is at the proper level.

If the level is within area 'A,' drain out the excess coolant until the level is within area 'B'.

If the level is within area 'C' or you cannot see the level, add the same coolant until the level is within area 'B'.

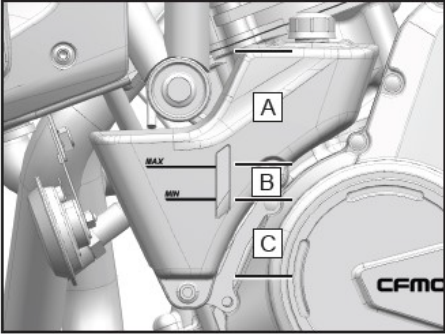

**⚠ WARNING**

When the vehicle is running, the coolant will have a very high temperature and stay in a state of compression.

Before the engine or cooling system has cooled down, do not open the radiator, radiator hose, reservoir or other cooling system related parts.

In the event of scalding, wash the affected area immediately with running water for more than 10 minutes and seek medical attention.