

IMPORTANT: Due to constant improvements in vehicle design and quality, changes to a vehicle configuration may occur which can affect the Owner's Manual information after the supply for production has already been printed.

The minimum fuel alarm feature description and dashboard navigation chart were found to be missing/incorrect in:

- **2024 UFORCE 600 Owner's Manual - Pages 83 and 84.**

The most recent version of this Owner's Manual can be found on the CFMOTO Dealer Portal or the consumer website at www.cfmotousa.com.

CFMOTO apologizes for any confusion this may have caused and assures consumers of our 100% commitment to the production of high-quality vehicles for powersports enthusiasts to enjoy.

ADDENDUM CONTINUES ON PAGE 2

CONTROLS AND FEATURES

Display the current vehicle speed. Speedometer section can be toggled to display the vehicle speed in Kilometers per hour (km/h) or Miles Per Hour (MPH) by the "ADJ" and "SET" keys.

19. Fuel Gauge / Low Fuel Indicator

Display the fuel level in the fuel tank.

When FUEL 3 alarm is set for minimum fuel, the fuel tank contains approximately 1.95 gal. (7.4 L) . When adjusted to this minimum alarm, the dashboard shows the fuel to be equal or more than 1 bar.

When FUEL 2 alarm is set for minimum fuel, the fuel tank contains approximately 1.19 gal. (4.5 L). When adjusted to this minimum alarm, the dashboard shows the fuel to be equal or more than 1 bar.

When FUEL 1 alarm is set for minimum fuel, the fuel tank contains approximately 0.55 gal. (2.1 L). When adjusted to this minimum alarm, the dashboard shows the fuel to be equal or more than 1 bar.

20. Rider Information Center

Indicates the total mileage the vehicle has traveled. Press "SET" button to toggle to TRIP meter, or engine hour, or EFI fault code, or battery voltage, or dashboard brightness, or EPS fault code.

21. Gear Position Indicator

Displays the current gear position.

22. Engine RPM / 'BEGINNER' Mode Indicator (Available in select markets)

Indicates the engine current RPM.

When connected to the CFMOTO RIDE APP (If T-BOX equipped), a BEGINNER mode can be activated. While in BEGINNER mode, an icon and "BEGINNER" will display on the dashboard. The vehicle speed will be limited to under 25 mph (40 km/h). Check wit your dealer to determine if this feature is available in your market.

23. Normal Mode Indicator

24. Work Mode Indicator

CONTROLS AND FEATURES

Dashboard Navigation - Settings and Adjustments

Item	Displays	SET	ADJ	Operation	Result	
Odometer	'TOTAL'	Short press		Shifts to trip	TRIP interface	
TRIP	'TRIP'		Long press	Trip resets to zero	TRIP distance reset	
		Short press		Shifts to engine hour	Engine hour display	
Engine hour	'H'	Short press		Shifts to EFI fault code	EFI fault code	
EFI fault code	'-----' or EFI fault code	Short press		Shifts to voltage	Voltage display	
Voltage	'V'	Short press		Shifts to dashboard brightness	Brightness level interface	
Dashboard brightness	'LEd'		Short press	Adjust brightness +1	Level 1-2-3-4-5	
		Short press		Shifts to low fuel alarm	Low fuel alarm interface	
Low fuel alarm	'FUEL'		Short press	Adjusts low fuel alarm level	FUEL 1 - FUEL 2 - FUEL- 3	
		Short press		Shifts to odometer	Odometer	
Home interface (odometer mode)	Home interface		Short press	Adjust brightness +1	Brightness level	
		Long press		Enters time / format setting	Hour setting flash	
	Hour setting		Short press		Adjust hour +1	Hour set
			Long press		Incremental 1-12 / 1-24	Hour set
	Minute setting		Short press		Shifts time unit to minutes	Minutes setting flash
			Short press		Adjust minute +1	Minutes set
			Long press		Incremental 00-59	Minutes set
	12/24 time unit interface		Short press		Shift to time format	12/24 time unit flash
			Short press		Toggles 12/24 time format	12/24 time unit set
	Km/Mile format interface		Short press		Shifts to Km/Mile format	Km/Mile flash
		Short press		Toggles Km/Mile Format	Km/Mile format set	
		Short press		Exit to home interface	Home interface	

NOTE: The number of the low fuel alarm can be changed when the fuel volume reaches two bars or above.

