

IMPORTANT: Due to constant improvements in vehicle design and quality, changes to a vehicle configuration may occur which can affect the Owner's Manual information after the supply for production has already been printed.

The minimum fuel alarm feature description and dashboard navigation chart were found to be missing/incorrect in:

- **2024 ZFORCE Series Owner's Manual - Pages 103 and 104.**

The most recent version of this Owner's Manual can be found on the CFMOTO Dealer Portal or the consumer website at www.cfmotousa.com.

CFMOTO apologizes for any confusion this may have caused, and assures consumers of our 100% commitment to the production of high-quality vehicles for powersports enthusiasts to enjoy.

ADDENDUM CONTINUES ON PAGE 2

CONTROLS AND FEATURES

15. Drive Mode

Displays the current drive modes of 2WD, 4WD and 4WD-LOCK.

16. Clock

Displays the current time. This dashboard section can be adjusted to correct time by using the “ADJ” and “SET” buttons.

17. Speedometer

Displays the current vehicle speed. Speedometer section can be toggled to display the vehicle speed in Kilometers per hour (km/h) or Miles Per Hour (MPH) using the “ADJ” and “SET” keys

18. Fuel Gauge / Low Fuel Indicator

Display the fuel level in the fuel tank.

When FUEL 3 alarm is set for minimum fuel, the fuel tank contains approximately 1.6 gal. (6 L). When adjusted to this minimum alarm, the dashboard shows the fuel to be equal or more than 1 bar.

When FUEL 3 alarm is set for minimum fuel, the fuel tank contains approximately 1.0 gal. (3.8 L). When adjusted to this minimum alarm, the dashboard shows the fuel to be equal or more than 1 bar.

When FUEL 3 alarm is set for minimum fuel, the fuel tank contains approximately 0.5 gal. (1.8 L). When adjusted to this minimum alarm, the dashboard shows the fuel to be equal or more than 1 bar.

19. Rider Information Center

This dashboard section can be toggled using the ‘SET’ button to display: ‘ODO’ -The accumulated vehicle distance traveled in miles/kilometers, ‘TRIP’ - The trip distance traveled, ‘H’ - The accumulated engine run time, - EFI fault code, ‘V’ - Battery voltage, ‘Brightness’ - Set the dashboard display brightness using the ‘ADJ’ button, - EPS fault code.

20. Gear Position Display

Displays the current vehicle transmission position.

21. Engine RPM

Indicates the engine current RPM, keep the RPM lower than the red area to avoid engine damage.

CONTROLS AND FEATURES

Dashboard Navigation - Settings and Adjustments

| Item | Displays | SET | ADJ | Operation | Result | |
|-----------------------------------|------------------------------|-------------|-------------|--------------------------------|-----------------------------|-----------------------|
| Odometer | ‘TOTAL’ | Short press | | Shift to trip | TRIP interface | |
| Trip | ‘TRIP’ | | Long press | Trip resets to zero | TRIP distance reset | |
| | | Short press | | Shift to engine hour | Engine hour displays | |
| Engine hour | ‘H’ | Short press | | Shift to EFI fault code | EFI fault code display | |
| EFI fault code | ‘-----’ or EFI fault code | Short press | | Shifts to voltage | Voltage display | |
| Voltage | ‘V’ | Short press | | Shifts to dashboard brightness | Brightness level interface | |
| Dashboard brightness | ‘LEd’ | | Short press | Adjust brightness +1 | Level 1-2-3-4-5 | |
| | | Short press | | Shifts to Low fuel alarm | Low fuel alarm interface | |
| Low fuel alarm | ‘FUEL’ | | Short press | Adjusts low fuel alarm level | FUEL 1 - FUEL 2 - FUEL 3 | |
| | | Short press | | Shift to EPS fault code | EPS fault code display | |
| EPS fault code | ‘-----’ or EPS fault code | Short press | | Shifts to odometer | Odometer | |
| Home interface (odometer mode) | Home interface | | Short press | Adjust brightness +1 | Home interface | |
| | | Long press | | Enters time / format setting | Hour setting flash | |
| | Hour setting | | Short press | | Adjust hour +1 | Hour set |
| | | | Long press | | Incremental 1-12 / 1-24 | Hour set |
| | | Short press | | | Shifts time unit to minutes | Minutes setting flash |
| | Minute setting | | Short press | | Adjust minute +1 | Minutes set |
| | | | Long press | | Incremental 00-59 | Minutes set |
| | | Short press | | | Shifts to time format | 12/24 time unit flash |
| | 12/24 time format interface | | Short press | Short press | Toggles 12/24 time format | 12/24 time unit set |
| | | Short press | | | Shifts to Km/Mile format | Km/Mile flash |
| Km/Mile format interface | | Short press | Short press | Toggles Km/Mile Format | Km/Mile format set | |
| | Short press | | | Exit to home interface | Home interface | |

NOTE: The number of the low fuel alarm can be changed when the fuel volume reaches two bars or above.